





Minimizing the cost of microbiological control while maintaining quality and product protection is a key requirement for utility water treatment within beverage production.

BEVPOR WG is an advanced membrane filter cartridge designed for the beverage industry to meet and surpass these criteria. Specifically developed as a beverage grade cartridge, BEVPOR WG utilizes an advanced polyethersulphone membrane configured to provide high flow and cost-effective performance. The membrane has an asymmetric pore structure which provides graded filtration throughout its depth, resulting in increased capacity to hold contaminants. Componentry has been selected to maximize mechanical strength and chemical compatibility enabling the filter to withstand repeated chemical cleaning and sterilization.


Features

- I Sterilizing grade PES membrane
- I Highly asymmetrical pore structure
- Robust materials of construction can be repeatedly steam sterilized and hot water sanitized


Benefits

- I Ensures safety of process water
- I High flow and cost-effective performance
- Extended service life

Performance Characteristics

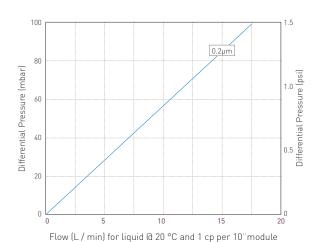

Filtration Stage

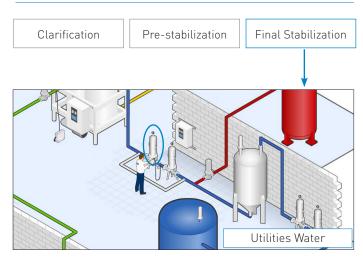



Specifications

Materials of Construction

■ Filtration Media: Polyethersulphone ■ Upstream Support: Polypropylene Downstream Support: Polypropylene Inner Support Core: Polypropylene Outer Protection Cage: Polypropylene I End Caps: Polypropylene 316L Stainless Steel ■ End Cap Insert: Silicone / EPDM O-rings:

Food Contact Compliance

Materials conform to the relevant requirements of FDA 21CFR Part 177, current EC1935 / 2004 and current USP Plastics Class VI - 121 °C.

Recommended Operating Conditions

Up to 70 °C (158 °F) continuous operating temperature and higher short-term temperatures during CIP to the following limits:

Temperature		Max Forward dP	
°C	°F	(bar)	(psi)
20	68	5.0	72.5
40	104	4.0	58.0
60	140	3.0	43.5
80	176	2.0	29.0
90	194	1.0	14.5
>100 (steam)	>212 (steam)	0.3	4.0

Effective Filtration Area (EFA)

10" (250 mm) Up to 0.5 m² (5.38 ft²)

Cleaning and Sterilization


BEVPOR WG cartridges can be repeatedly steam sterilized in-situ or autoclaved at up to 130°C (266°F). They can be sanitized with hot water at up to 90°C (194°F) and are compatible with a wide range of chemicals.

Please refer to our Clean in Place support guide or contact your local Parker representative for more information.

Manufacturing Traceability

Each filter cartridge displays the product name, product code and lot number. Additionally, each module displays a unique serial number providing full manufacturing traceability.

Ordering information

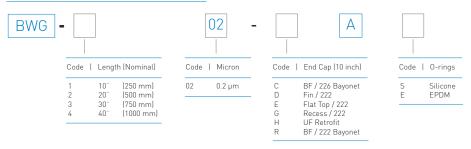

VSH & HSL HOUSING RANGE AVAILABLE







WE ARE YOUR 'ONE STOP SHOP' FOR ALL OF YOUR FILTRATION REQUIREMENTS

LIQUID FILTRATION

- CARTRIDGES
- FILTER BAGS
- VESSELS
- STRAINERS

AIR FILTRATION

- VENT FILTERS
- STERILE AIR
- VACCUM
- AIR-CONDITIONING
- FILTER MEDIA

DOMESTIC

- ULTRAVIOLET
- TREATMENT OF BOREHOLES, SPRINGS & WELLS
- WATER TESTING

FUEL FILTRATION

• DIESEL, AVIATION



Prosep Filter Systems Ltd Unit G19, River Bank Way, Lowfields Business Park, Elland, West Yorkshire HX5 9DN Phone: 01422 377367 email: sales@prosep.co.uk www.prosep.co.uk





