



# PROSTEEL N Filter Cartridges

- liquid filters
- 316L stainless steel

PROSTEEL N filters provide the ideal solution in applications where traditional polymer based filters are limited by compatibility, exposure time or a combination of high temperature and viscosity.

They are ideally suited to filtration of solvents used in a wide range of processes in pharmaceuticals, food & beverage and electronics through to paints and inks.



The Parker domnick hunter range of stainless steel filters provides the solution to compatibility issues while maintaining excellent flow rates for clarifying duties. The filters are available in two formats both using the same filtration media but one manufactured in a pleated construction and one in a cylindrical wrap. This allows a cost-effective selection depending on flow rate and dirt holding requirements.



## Features and Benefits

- Nominally rated stainless steel liquid filters
- Ideal for aggressive solvents, viscous and hot solutions
- Removal rating from 5 to 100 microns
- Compatible with most solvents
- Stainless steel mesh ensures excellent regeneration characteristics for extended service life
- Available in two formats; pleated and wrapped, for complete system optimisation

## Performance Characteristics

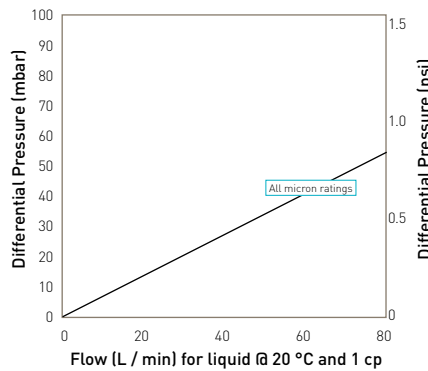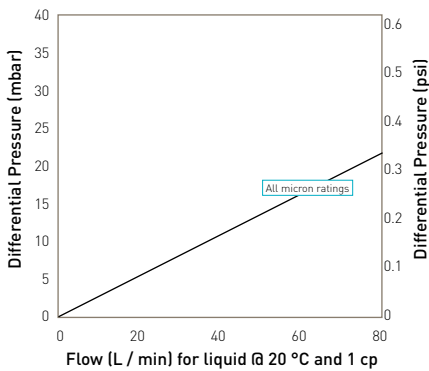

Pleated cartridge flow rates  
10" Size (250 mm) Cartridge

Cylindrically wrapped cartridge flow rates  
10" Size (250 mm) Cartridge

## Specifications

### Materials of Construction

- Filtration Media: 316L Stainless Steel
- Inner Support Core: 316L Stainless Steel
- Outer Protection Cage: 316L Stainless Steel
- End Caps: 316L Stainless Steel
- Standard o-rings/gaskets\*: EPDM
- Assembly Method: TIG Welded

\*All o-rings are manufactured from FDA approved compounds.

### Recommended Operating Conditions

Operating Temperature		Maximum Forward DP		Maximum Reverse DP	
°C	°F	(bar)	(psi)	(bar)	(psi)
200	392	25	364	3	44

Note: The maximum operating temperature is dependant on o-ring selection and properties of the liquid being filtered.

### Effective Filtration Area (EFA)

- ZCCM Cylindrical Wrap
  - 10" (250 mm) 0.05 m<sup>2</sup> (0.53 ft<sup>2</sup>)
- ZCPM Pleated
  - 10" (250 mm) 0.13 m<sup>2</sup> (1.39 ft<sup>2</sup>)

## Ordering Information


ZC		-		-	
<b>Code   Type</b>	<b>Code   Length (Nominal)</b>	<b>Code   Micron</b>	<b>Code   Endcap (10")</b>	<b>Code   O-rings</b>	
CM Wrapped PM Pleated	B 2.5" (65 mm) A 5" (125 mm) 1 10" (250 mm) 2 20" (500 mm) 3 30" (750 mm)	005 5.0 µm 010 10.0 µm 020 20.0 µm 040 40.0 µm 100 100.0 µm	B dh DOE C 226 Bayonet	E* EPDM P PTFE Encapsulated Silicone S Silicone V Viton	
All cartridges are supplied as single items.			<b>Code   Endcap (Demi)</b>	*EPDM o-ring supplied as standard without having to specify the 'E' code.	
			T TRUESEAL Z Demi A & B Std		

PROSEP FILTER SYSTEMS LTD  
Unit G19  
River Bank Way  
Lowfields Business Park  
Elland  
West Yorkshire  
HX5 9DN

**Tel: 01422 377367**  
Fax: 01422 377369

Email: [enquiries@prosep.co.uk](mailto:enquiries@prosep.co.uk)  
[www.prosep.co.uk](http://www.prosep.co.uk)

**Map and Directions to Prosep Filters Limited**

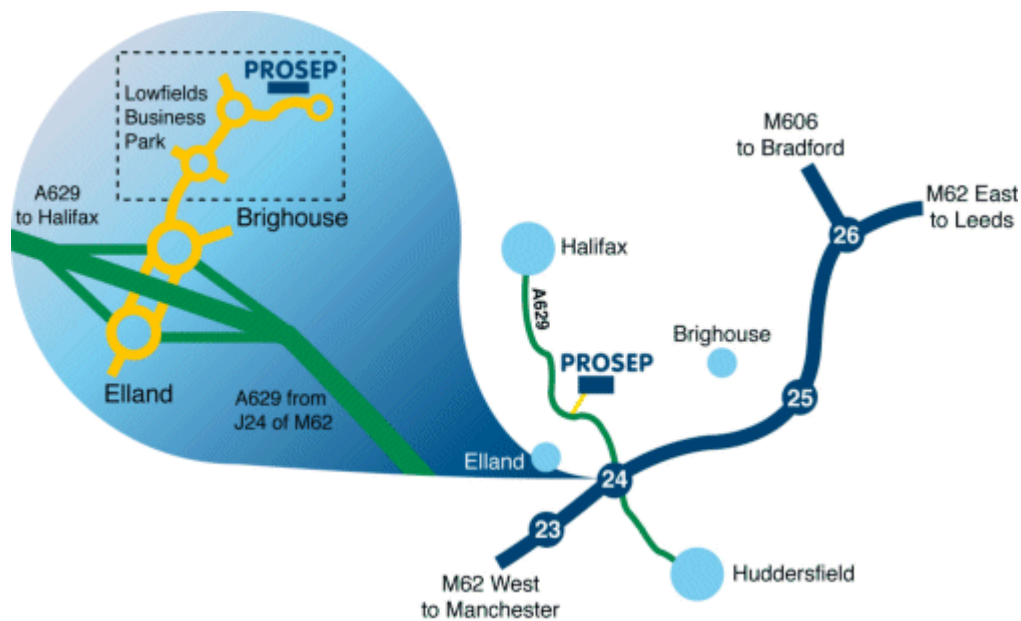

Leave M62 at Junction 24.  
At roundabout adjacent to Cedar Court Hotel take 2nd exit onto dual carriageway (A629), signposted Halifax.  
Take 1st exit slip road.  
At roundabout at end of sliproad, take 3rd exit off.  
This is the entrance to Lowfields Business Park.  
Proceed straight over 1st roundabout.  
At next roundabout take 2nd exit onto River Bank Way - Prosep Filters can be found on the left after the S-bend.

[Link to Google Maps](#)